

Step 1:

Place the coil in the stainless steel BBQ. Insert the beginning and end of the spiral through the largest hole at the bottom of the BBQ.



Step 2:

Attach both the compression fittings to the coil (see image below). Tighten the couplings securely with 2 wrenches or pliers. Should the couplings leak, they can still be tightened.



Step 3:

Attach the GeKa couplings to the compression fittings with the hose barb hand-tight.



Step 4: Connect the Intex pump including the hoses to the coil (hoses and pump are not included).

Step 5: Run the water through the coil. After this, turn on the pool heater and always allow the water to pump through the coil.

Note, should the pump fail or not work keep in mind that boiling water may come out of the coil. Always keep enough distance from the pool heater.